


RPS CONDOR 150 PARTS CATALOGUE






Frame						
No	Code	Chinese	English	Qty	Unit	Remark
1	C-00-001	车架总成	Frame complete	1	pcs	
2	C-00-002	侧支架及螺栓	Kick stand and bolt	1	pcs	
3	C-00-003	油箱护板支架	Bracket, gas tank protect cover	1	pcs	
4	C-00-004	点火锁支架	Bracket, igation switch	1	pcs	
5	C-00-005	后挡泥支架	Bracket, rear fender	1	pcs	
6	C-00-006	前右转向灯支架	Bracket, R front signal light	1	pcs	
7	C-00-007	前左转向灯支架	Bracket, L front signal light	1	pcs	
8	C-00-008	点火锁支架螺栓M6×16	Bolt M6x16, igniton switch	2	pcs	
9	C-00-009	左右侧光片支架螺栓M6×12	Bolt M6x12, L/R reflector bracket	4	pcs	
10	C-00-010	油箱护板支架螺栓M6×16	Bolt M6x16, gas tank protect cover bracket	1	pcs	
11	C-00-011	后挡泥支架与车架紧固螺栓M8×20	Bolt M8x20, frame and rear fender bracket	4	pcs	

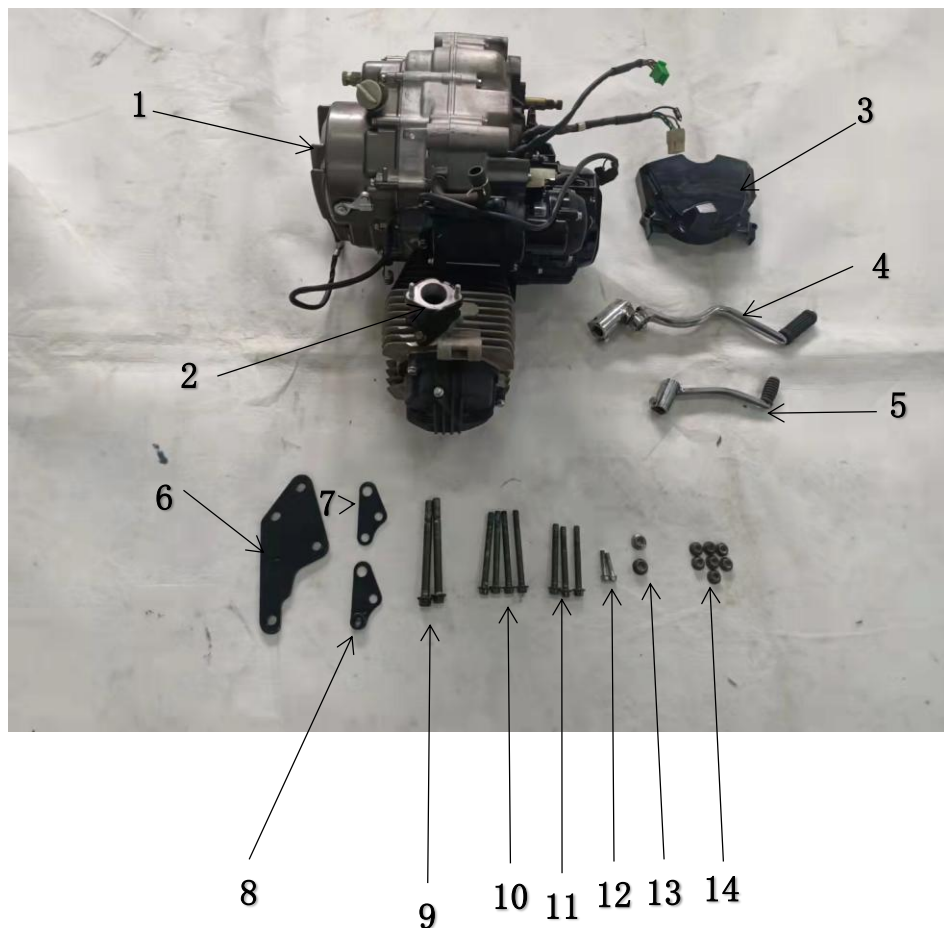


	Engine Complete					
No	Code	Chinese	English	Qty	Unit	Remark
1	F-00-001	发动机总成	Engine complete	1	pcs	
2	F-00-002	进气管	Air intake	1	pcs	
3	F-00-003	发动机边盖	Tail cover, engine	1	pcs	
4	F-00-004	启动杆	Kick starter	1	pcs	
5	F-00-005	变档杆	Gearshift lever	1	pcs	
6	F-00-006	发动机前悬挂板	Front suspension, engine	2	pcs	
7	F-00-007	发动机上左悬挂板	L uppper suspension, engine	1	pcs	
8	F-00-008	发动机上右悬挂板	R upper suspension, engine	1	pcs	
9	F-00-009	后悬挂螺栓M10×115	Bolt M10x115, rear suspension, engine	2	pcs	
10	F-00-010	前悬挂螺栓M8×90	Bolt M8x90, front suspension, engine	4	pcs	
11	F-00-011	上悬挂紧固螺栓M8×75	Bolt M8x75, upper suspension, engine	3	pcs	
12	F-00-012	发动机边盖螺栓小盘头M6×28	Bolt M6x28, engine tail cover	2	pcs	
13	F-00-013	后悬挂自锁螺母M10	Self lock M10, rear suspension, engine	2	pcs	
14	F-00-014	前悬挂上悬挂自锁螺母螺母M8	Self lock M8, front and upper suspension, engine	7	pcs	

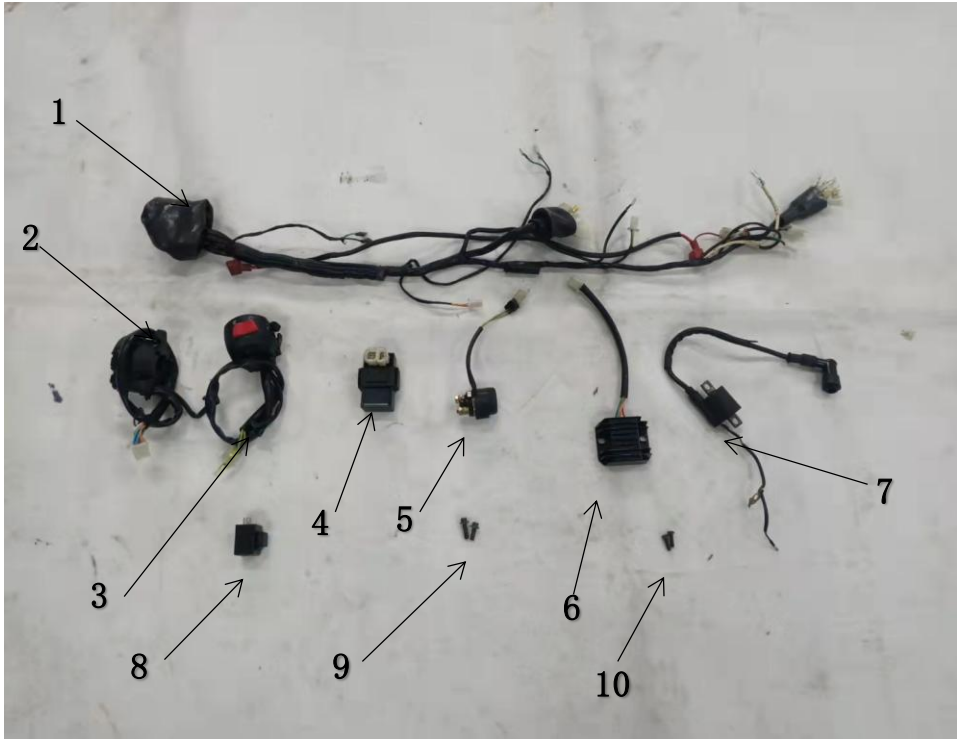


	Electric					
No	Code	Chinese	English	Qty	Unit	Remark
1	D-00-001	主线	Wire harness	1	pcs	
2	D-00-002	左闸把	L handle bar switch	1	pcs	
3	D-00-003	右闸把	R handle bar switch	1	pcs	
4	D-00-004	点火器	CDI	1	pcs	
5	D-00-005	继电器	Starting relay	1	pcs	
6	D-00-006	调压器	Regulator	1	pcs	
7	D-00-007	高压包	Ignition coil	1	pcs	
8	D-00-008	闪光器	Flasher	1	pcs	
9	D-00-009	调压器紧固螺栓M6×16	Bolt M6x16, regulator	2	pcs	
10	D-00-010	高压包紧固螺栓M5×20	Bolt M5x20, Ignition coil	2	pcs	




Lights						
No	Code	Chinese	English	Qty	Unit	Remark
1	Q-00-001	牌照灯	License plate light	1	pcs	
2	Q-00-002	大灯	Headlight	1	pcs	
3	Q-00-003	尾灯	Taillight	1	pcs	
4	Q-00-004	仪表	Speedometer	1	pcs	
5	Q-00-005	后转向灯	L/R rear signal lights	1	set	
6	Q-00-006	前转向灯	L/R front signal lights	1	set	
7	Q-00-007	前反射器	Front reflector	1	set	
8	Q-00-008	后左右反射器	Rear L/ reflector	1	set	
9	Q-00-009	后反射器	Rear relector	1	set	
10	Q-00-010	转向灯座	Signal light housing	4	pcs	
11	Q-00-011	后左右反射器及后反射器螺母M6	L/R rear reflector and nut M6	3	pcs	
12	Q-00-012	尾灯螺母M6	Nut M6, tail light	2	pcs	
13	Q-00-013	牌照灯螺母M5	Nut M5, license plate light	2	pcs	
14	Q-00-014	尾灯垫片96Φ6	Wash 96Φ6, taillight	2	pcs	

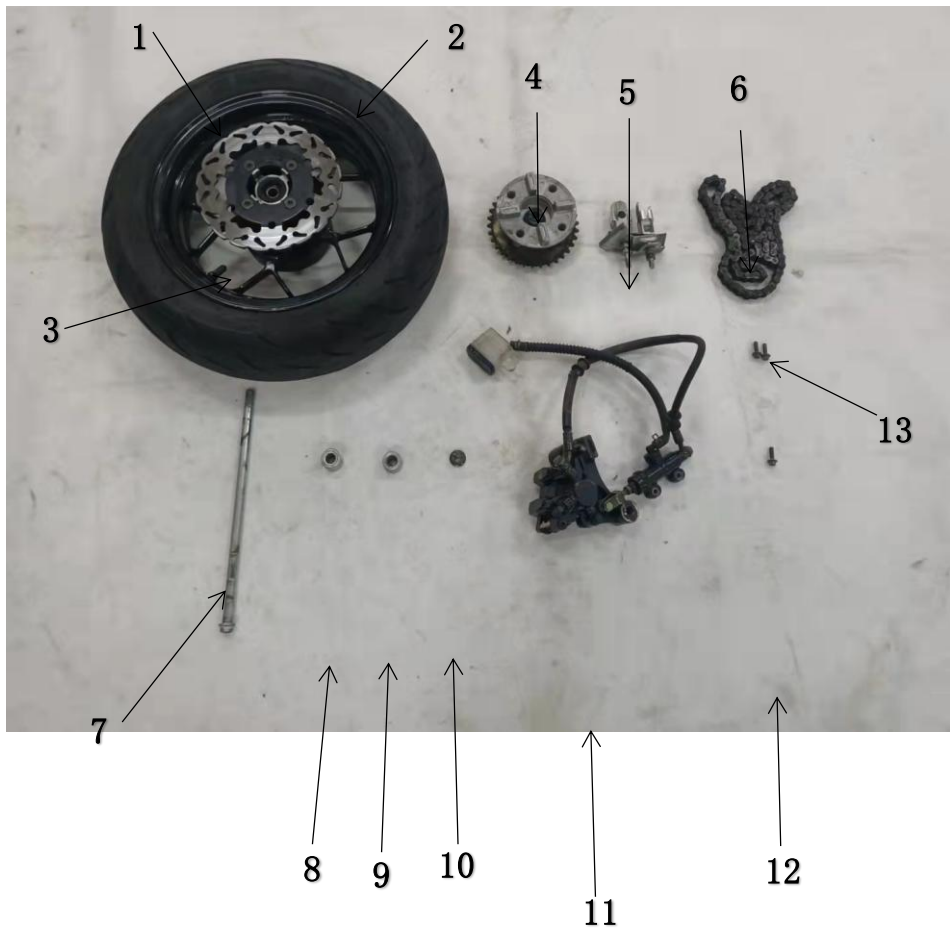

	Rear Wheel Complete					
No	Code	Chinese	English	Qty	Unit	Remark
1	H-00-001	后铝轮:3.50×12	Rear rim 3.50x12	1	pcs	
2	H-00-002	后轮内外胎130/70-12	Rear tire 130/70-12 and inner tube	1	set	
3	H-00-003	后碟刹盘	Rear brake disc	1	pcs	
4	H-00-004	缓冲体总成428-34齿	Buffer complete 428-34 teeth	1	set	
5	H-00-005	链条调节器及挡块	Chain adjustor and block	1	set	
6	H-00-006	链条428H-112节	Chain 428H-112	1	pcs	
7	H-00-007	后轮轴φ 12×302mm	Rear axle φ12×302mm	1	pcs	
8	H-00-008	后轮左衬套φ 12×φ 26×26mm	L bush φ12×φ26×26mm, rear axle	1	pcs	
9	H-00-009	后轮右衬套φ 12×φ 26×24mm	R bush φ12×φ26×24mm, rear axle	1	pcs	
10	H-00-010	后轮螺母M12	Nut M12	1	pcs	
11	H-00-011	后碟刹	Rear disc brake complete	1	set	
12	H-00-012	后碟刹上泵紧固螺栓M6×20	Bolt M6x20, brake pump	1	pcs	
13	H-00-013	后碟刹与右脚蹬紧固螺栓M6×25	Bolt M6x25, rear brake and R foot peg	2	pcs	

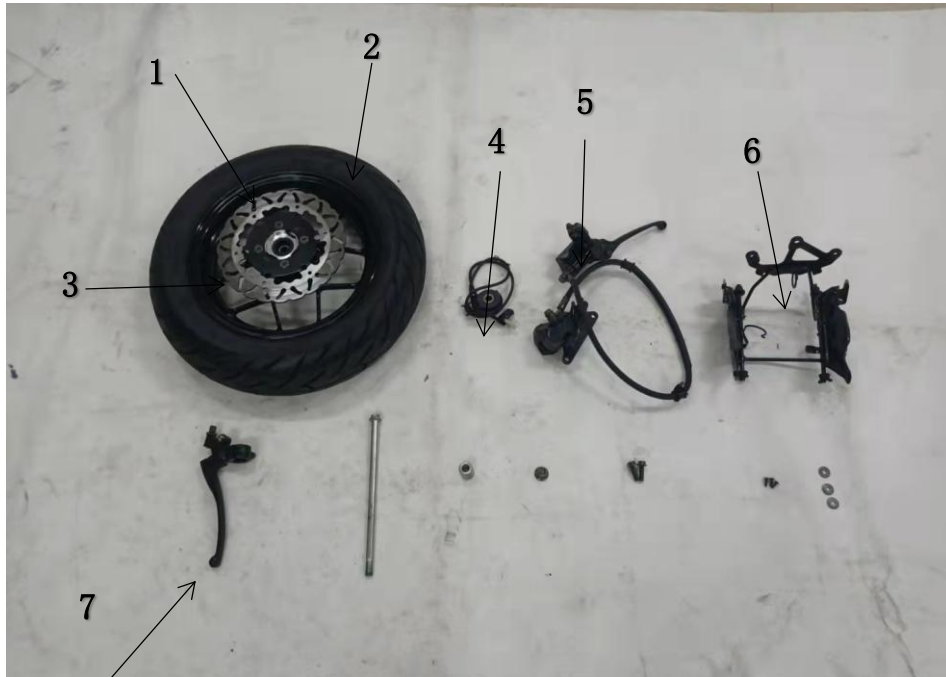



Front Wheel Complete						
No	Code	Chinese	English	Qty	Unit	Remark
1	L-00-001	前轮鼓2.75×12	Front rim 2.75x12	1	pcs	
2	L-00-002	前轮内外胎 120/70-12	Front tire 120/70-12 and inner tube	1	set	
3	L-00-003	前碟刹盘	Front brake disc	1	pcs	
4	L-00-004	计速器	Speed sensor	1	pcs	
5	L-00-005	前碟刹	Front disc brake complete	1	set	
6	L-00-006	大灯支架	Headlight bracket	1	pcs	
7	L-00-007	离合手柄	Clutch lever	1	pcs	
8	L-00-008	前轮轴φ 12×250mm	Front axle φ12×250mm	1	pcs	
9	L-00-009	前轮衬套φ 12×φ 23×29mm	Bush φ12×φ23×29mm, front axle	1	pcs	
10	L-00-010	前轮螺母M12	Nut M12, front axle	1	pcs	
11	L-00-011	前碟刹紧固螺栓M6×25	Bolt M6x25, front disc brake	2	pcs	
12	L-00-012	仪表与大灯支架紧固螺栓4.2×13	Bolt 4.2x13, Speedometer and headlight bracket	3	pcs	

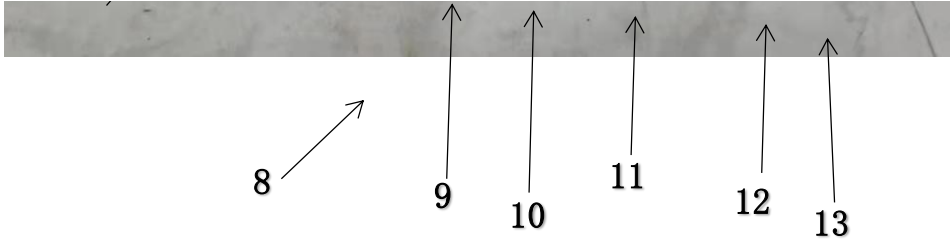

13	L-00-013	仪表与大灯支架平垫96 Φ 5	Flat washer 96 Φ5, speedometer and headligh bracket	3	pcs	
----	----------	-----------------	---	---	-----	--





	Rear Fork and Foot Pegs					
No	Code	Chinese	English	Qty	Unit	Remark
1	P-00-001	平叉	Rear swing arm	1	pcs	
2	P-00-002	右脚蹬总成	R foot peg complete	1	set	
3	P-00-003	左脚蹬总成	L foot peg complete	1	set	
4	P-00-004	链条护卡	Chain guard	1	pcs	
5	P-00-005	平叉轴Φ 12×335mm	Axle Φ12×335mm, rear swing arm	1	pcs	
6	P-00-006	平叉右衬套Φ 12.5×Φ 22×8	R bushΦ12.5×Φ22×8, rear swing arm	1	pcs	
7	P-00-007	平叉左衬套Φ 12.5×Φ 22×10	L bush Φ12.5×Φ22×8, rear swing arm	1	pcs	

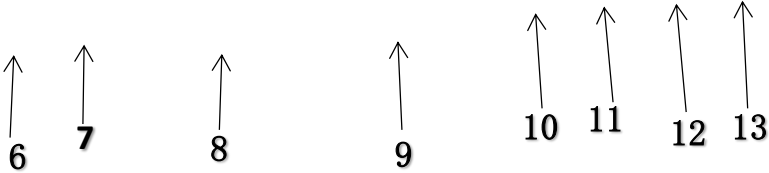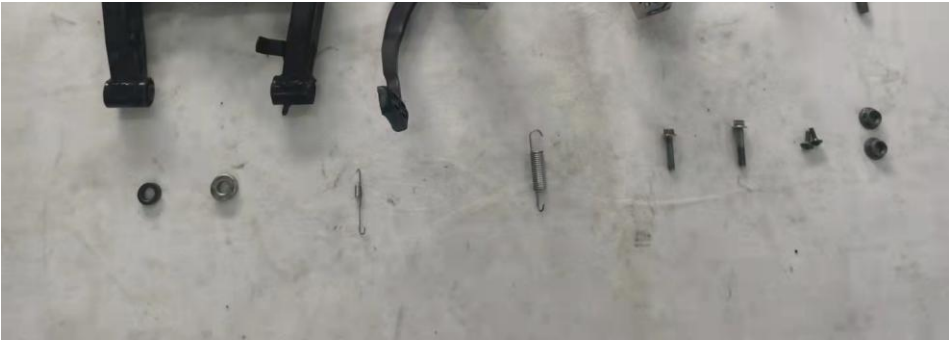


8	P-00-008	后制动开关簧 ϕ 1.2 $\times$ ϕ 7 $\times$ 75mm	Spring ϕ 1.2 $\times$ ϕ 7 $\times$ 75mm, rear brake switch	1	pcs	
9	P-00-009	后制动回位簧 ϕ 2.5 $\times$ ϕ 15.5 $\times$ 80mm	Spring ϕ 2.5 $\times$ ϕ 15.5 $\times$ 80mm, rear brake	1	pcs	
10	P-00-010	左脚蹬紧固螺栓M8 $\times$ 30	Bolt M8x30, L foot peg	1	pcs	
11	P-00-011	右脚蹬紧固螺栓M8 $\times$ 40	Bolt M8x30, R foot peg	1	pcs	
12	P-00-012	链条护卡紧固螺栓+字带垫M5 $\times$ 16	Bolt M5x16, chain guard	2	pcs	
13	P-00-013	平叉左右紧固螺母M12	Bolt M12, Rear swing arm(both sides)	2	pcs	




	Rear Handle and Brackets					
No	Code	Chinese	English	Qty	Unit	Remark
1	X-00-001	左后扶手	L rear handle	1	pcs	
2	X-00-002	右后扶手	R rear handle	1	pcs	

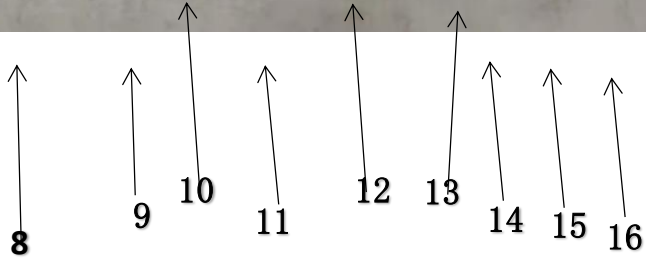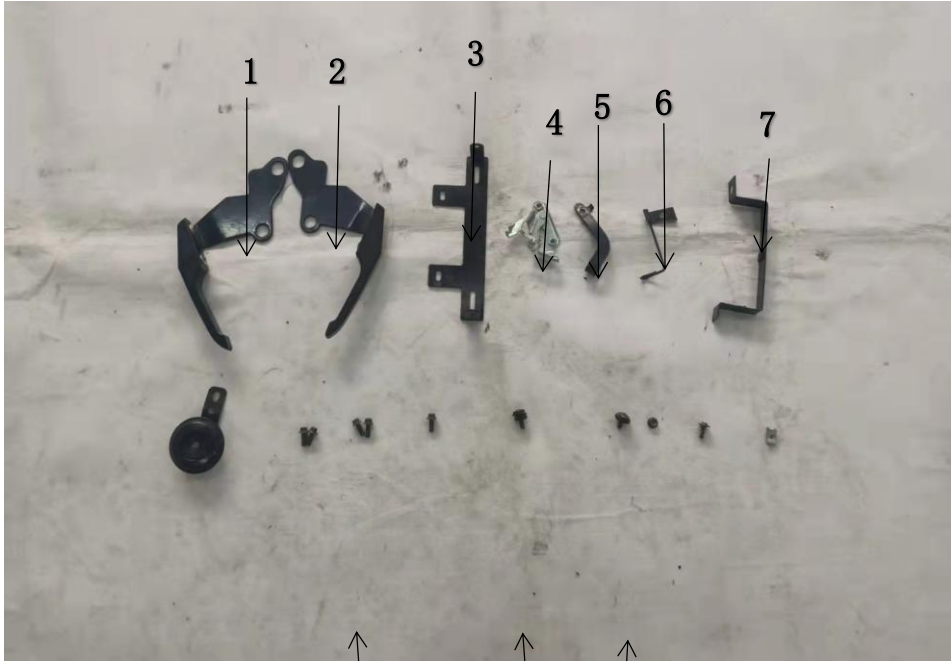


3	X-00-003	后左右反射器支架	Bracket, L/R rear reflector	1	pcs	
4	X-00-004	座垫锁座	Lock housing, seat	1	pcs	
5	X-00-005	前碟刹支架	Bracket, front disc brake	1	pcs	
6	X-00-006	里程线夹支架	Clamp, speedometer cable	1	pcs	
7	X-00-007	电瓶支架	Bracket, battery	1	pcs	
8	X-00-008	喇叭	Horn	1	pcs	
9	X-00-009	后左右反射器支架螺栓M6×16	Bolt M6x16, bracket, L/R rear reflector	2	pcs	
10	X-00-010	座垫锁座螺栓M6×12	Bolt M6x12, seat lock housing.	2	pcs	
11	X-00-011	喇叭紧固螺栓M6×12	Bolt M6x12, horn	1	pcs	
12	X-00-012	里程线卡支架螺栓大扁头M6×16	Flat heat bolt M6x16, speedometer cable clamp bracket	1	pcs	
13	X-00-013	碟刹支架螺栓大扁头M6×20	Flat head bolt M6x20, front disc brake bracket	1	pcs	
14	X-00-014	碟刹支架螺母M6	Nut M6, front disc brake bracket	1	pcs	
15	X-00-015	电瓶支架螺栓+字带垫M5×16	Bolt M5x16, battery bracket	1	pcs	
16	X-00-016	电瓶支架自攻卡M5	Clip M5, bettery bracket	1	pcs	

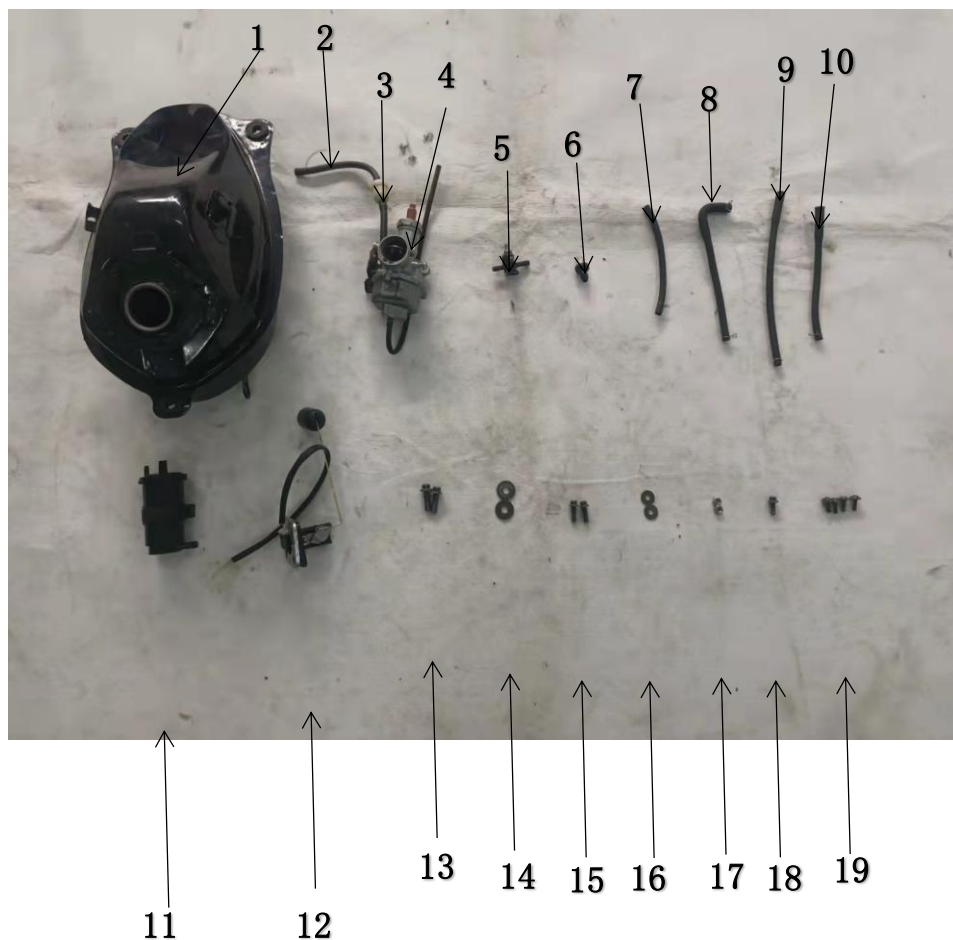


Gas Tank Complete						
No	Code	Chinese	English	Qty	Unit	Remark
1	Y-00-001	油箱	Gas tank	1	pcs	
2	Y-00-002	EPA油管	Fuel line1	1	pcs	
3	Y-00-003	燃油过滤器	Fuel filter	1	pcs	
4	Y-00-004	化油器	Carburetor	1	pcs	
5	Y-00-005	油开关	Pet cock	1	pcs	
6	Y-00-006	单向阀	One way valve	1	pcs	
7	Y-00-007	EPA油管(油箱-油开关)	Fuel line 2(gas tank to pet cock)	1	pcs	
8	Y-00-008	φ5×φ9×200-φ9×φ13.5×40(7字型)	Fuel line 3 φ5×φ9×200-φ9×φ13.5×40	1	pcs	
9	Y-00-009	φ5×φ9×200-φ8×φ12×40(大小头)	Fuel line 4 φ5×φ9×200-φ8×φ12×40	1	pcs	
10	Y-00-010	φ5×φ9×140-φ8×φ12×40(大小头)	Fuel line 5 φ5×φ9×200-φ8×φ12×40	1	pcs	
11	Y-00-011	碳罐	Carbon canister	1	pcs	
12	Y-00-012	传感器	Fuel sensor	1	pcs	
13	Y-00-013	油箱前紧固螺栓M8×20	Bolt M8x20, bolt, gas tank(front)	2	pcs	
14	Y-00-014	油箱前垫片96φ 8	Washer 96φ8, gas tank(front)	2	pcs	
15	Y-00-015	油箱后紧固螺栓M6×20	Bolt M6x20, gas tank(back)	2	pcs	
16	Y-00-016	邮箱后紧固垫片φ 6加大垫片	Big washer φ6, gas tank(back)	2	pcs	
17	Y-00-017	化油器与进气管螺母M6	Nut M6, carburetor and air intake	2	pcs	
18	Y-00-018	油开关装配螺栓M6×16	Bolt M6x16, pet cock	1	pcs	
19	Y-00-019	传感器螺栓+字带垫5×16	Crosshead bolt 5x16, fuel sensor	4	pcs	

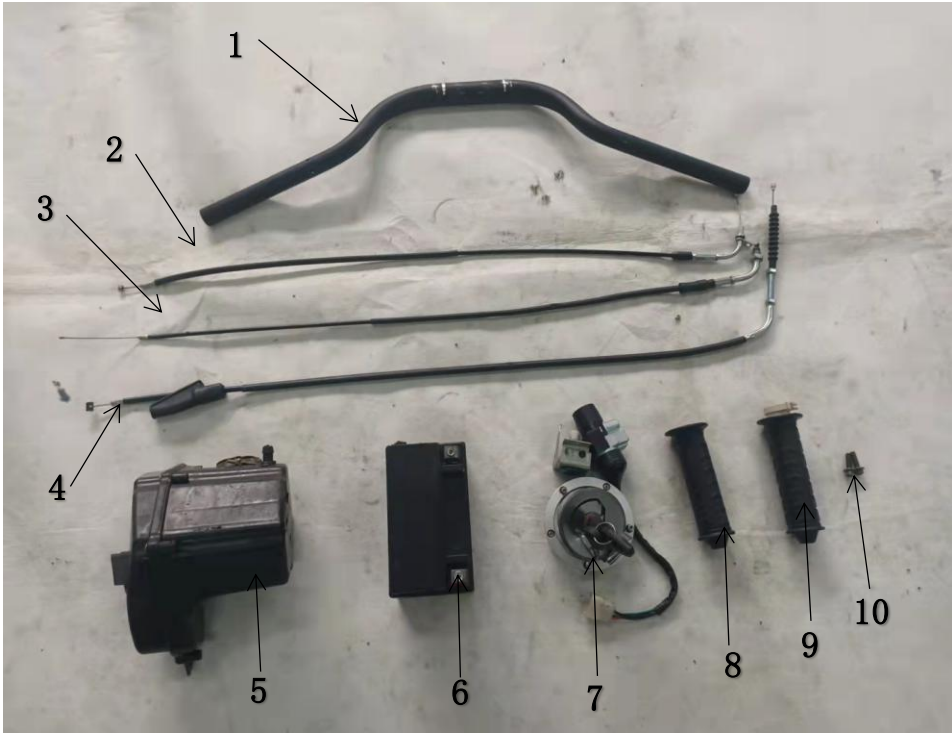

	Handle Bar					
	No	Code	Chinese	English	Qty	Unit Remark
	1	S-00-001	手把管	Handle bar	1	pcs
	2	S-00-002	风门线	Choke cable	1	pcs
	3	S-00-003	油门线	Throttle cable	1	pcs
	4	S-00-004	离合线	Clutch cable	1	pcs
	5	S-00-005	空滤器	Air filter	1	pcs
	6	S-00-006	电瓶	Battery	1	pcs
	7	S-00-007	三锁	All locks(three locks)	1	set
	8	S-00-008	左手把胶	L handle grip	1	pcs
	9	S-00-009	加油器	Accelerator	1	pcs
	10	S-00-010	空滤器螺栓M6×16	Bolt M6x16, air filter	3	pcs

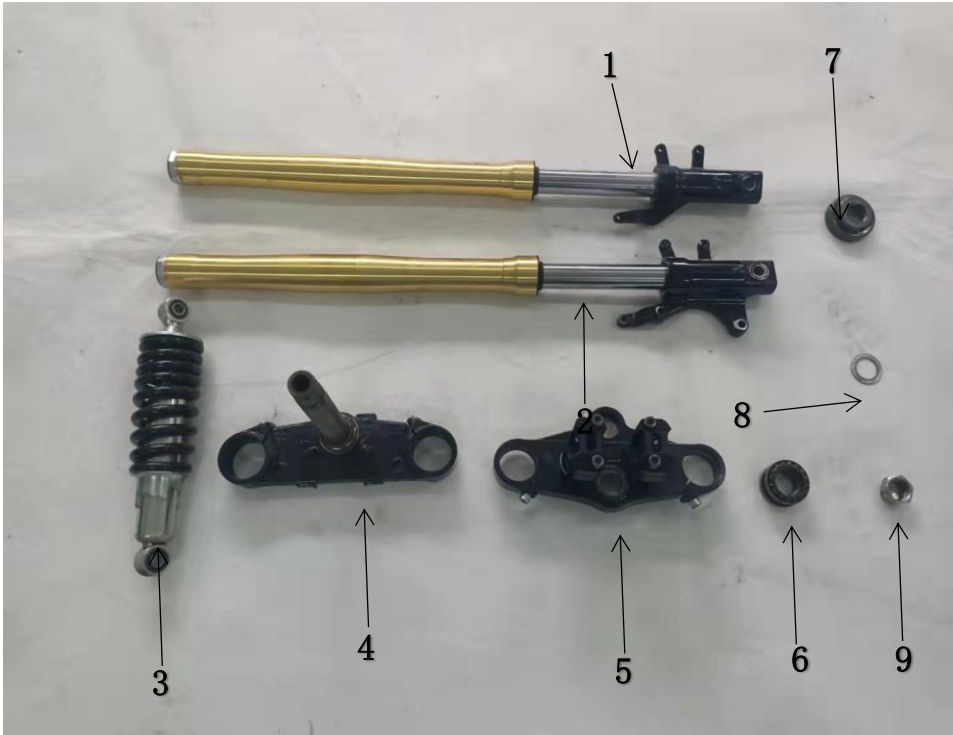

	Front Shocks					
No	Code	Chinese	English	Qty	Unit	Remark
1	J-00-001	前左减震	L front shock	1	pcs	
2	J-00-002	前右减震	R front shock	1	pcs	
3	J-00-003	后减震	Rear shock	1	pcs	
4	J-00-004	方向柱	Steering stem	1	pcs	
5	J-00-005	上连板及卡子卡座	Clips/clamp, upper connecting plate	1	pcs	
6	J-00-006	方向轴承	Steering stem bearings	1	set	
7	J-00-007	调节螺母	Adjustable nut	1	pcs	
8	J-00-008	锁紧垫片	Lock washer	1	pcs	
9	J-00-009	锁紧螺母	Lock nut	1	pcs	

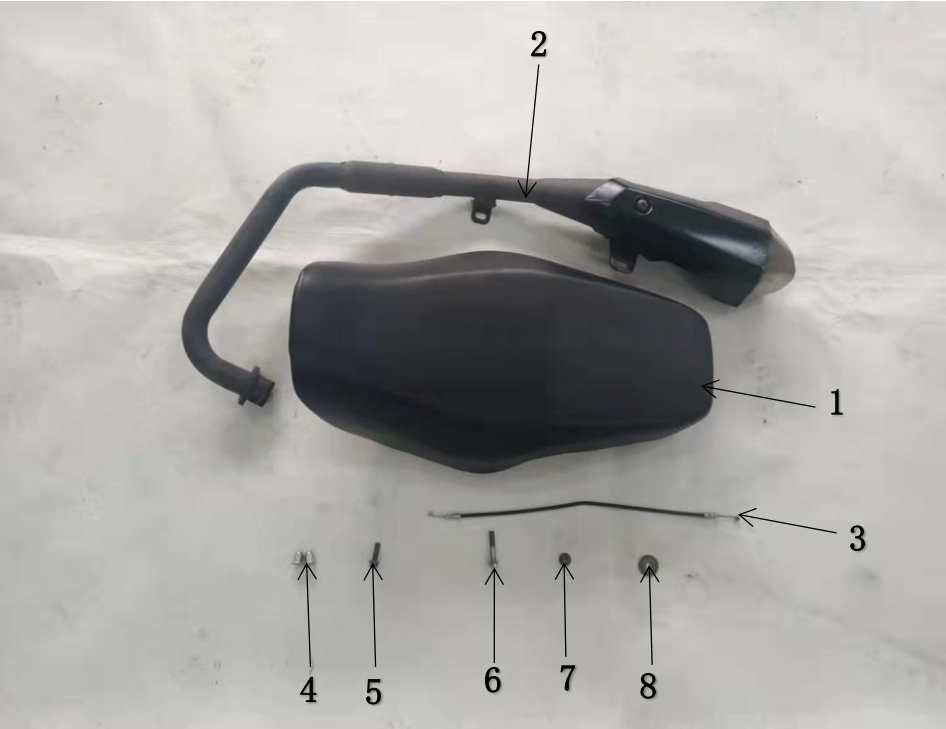


	Seat					
No	Code	Chinese	English	Qty	Unit	Remark
1	Z-00-001	消声器	Muffler	1	pcs	
2	Z-00-002	座垫	Seat	1	pcs	
3	Z-00-003	座垫拉索	Seat cable	1	pcs	
4	Z-00-004	消声器前球型螺母M8	Nut M8	2	pcs	
5	Z-00-005	消声器与车架连接M8×16	Bolt M8x16	1	pcs	
6	Z-00-006	消声器与脚蹬连接M8×40	Bolt M8x40	1	pcs	
7	Z-00-007	消声器与脚蹬连接螺母M8	Nut M8	1	pcs	
8	Z-00-008	消声器与脚蹬连接垫片96φ 8	Washer 96φ8	1	pcs	




Plastic Body						
No	Code	Chinese	English	Qty	Unit	Remark
1	W-00-001	前挡泥	Front fender	1	pcs	
2	W-00-002	大灯左壳体	L cover, headlight	1	pcs	
3	W-00-003	大灯右壳体	R cover, headlight	1	pcs	
4	W-00-004	头罩	Decor cover, headlight	1	pcs	
5	W-00-005	左右壳体连接件	Connect piece, L/R cover	1	pcs	
6	W-00-006	前挡泥螺栓大扁头MM6×20	Flat bolt, M6x20	4	pcs	
7	W-00-007	前挡泥垫片96φ 6	Washer 96φ6	4	pcs	
8	W-00-008	前挡泥胶皮垫φ 6×φ 18×2	Rubber washer φ6×φ18×2	4	pcs	
9	W-00-009	大灯左右壳体螺栓大扁头MM6×20	Flat bolt, M6x20	4	pcs	
10	W-00-010	大灯左右壳体垫片96φ 6	Washer 96φ6	4	pcs	
11	W-00-011	大灯左右壳体胶平垫φ 6×φ 18×2	Flat washer φ6×φ18×2	4	pcs	
12	W-00-012	头罩与大灯螺栓4.2×13	Bolt 4.2x13	4	pcs	
13	W-00-013	左右壳体连接件M5×17卡子	Clip M5x17	2	pcs	
14	W-00-014	左右壳体连接螺栓+字带垫M5×16	Crosshead bolt M5x16	2	pcs	
15	W-00-015	左右壳体连接件与大灯螺栓M5×16	Bolt M5x16	1	pcs	




Plastic Body						
No	Code	Chinese	English	Qty	Unit	Remark
1	R-00-001	装饰件右	R Decor	1	pcs	
2	R-00-002	护板装饰件右及装饰卡子	Protect, R Decor&clip	1	pcs	
3	R-00-003	油箱护板右	R protect cover, gas tank	1	pcs	
4	R-00-004	车体右	R body	1	pcs	
5	R-00-005	侧盖右	R side cover	1	pcs	
6	R-00-006	油箱护板下装饰件右	R decor, gas tank lower protect	1	pcs	
7	R-00-007	装饰件右螺栓大扁头M6×20	Flat bolt M6x20. R decor	2	pcs	
8	R-00-008	装饰件右平垫96φ 6	Flat washer 96φ6, R decor	2	pcs	
9	R-00-009	装饰件右胶平垫φ 6×φ 18×2	Flat washer φ6×φ18×2, R decor	2	pcs	
10	R-00-010	护板装饰件右自攻钉4.2×10	Screw 4.2x10, protect R decor	4	pcs	
11	R-00-011	车体右螺栓大扁头M6×16	Flate bolt, M6x16, R body	1	pcs	
12	R-00-012	车体右平垫96φ 6	Flat washer 96φ6, R body	1	pcs	
13	R-00-013	车体右胶平垫φ 6×φ 18×2	Flat washer φ6×φ18×2, R body	1	pcs	

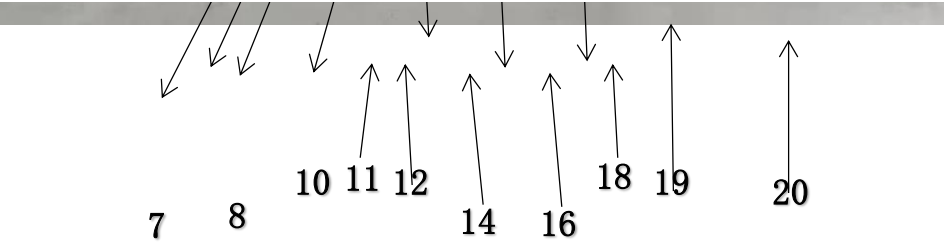

14	R-00-014	车体右自攻钉4.2×10	Screw 4.2x10, R body	1	pcs	
15	R-00-015	侧盖右自攻钉4.2×10	Screw 4.2x10, R side cover	2	pcs	
16	R-00-016	侧盖右大扁头M6×16	Flat head bolt M6 x16, R side cover	1	pcs	
17	R-00-017	侧盖右平垫96φ 6	Flat washer 96φ6, R side cover	1	pcs	
18	R-00-018	侧盖右胶平垫φ 6×φ 18×2	Rubber flat washer φ6×φ18×2, R side cover	1	pcs	
19	R-00-019	侧盖右后+字带垫M5×16	Cross head M5x16, rear R side cover	2	pcs	
20	R-00-020	油箱护板下装饰件右自攻钉4.2×10	Screw 4.2x10, R decor, gas tank protect	5	pcs	

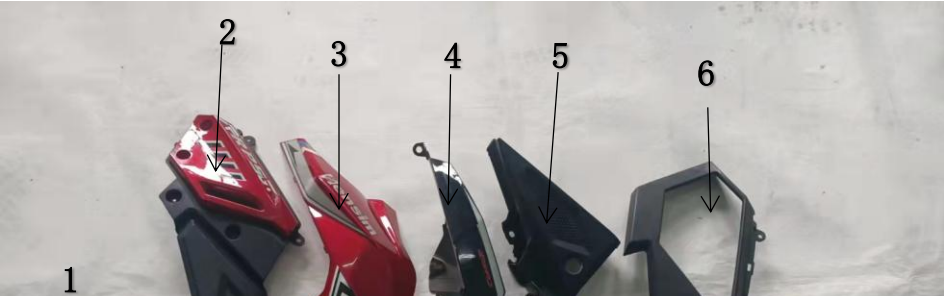


	Plastic Body					
No	Code	Chinese	English	Qty	Unit	Remark
1	T-00-001	装饰件左	L Decor	1	pcs	
2	T-00-002	护板装饰件左及装饰卡子	Protect, L Decor&clip	1	pcs	
3	T-00-003	油箱护板左	L protect cover, gas tank	1	pcs	
4	T-00-004	车体左	L body	1	pcs	
5	T-00-005	侧盖左	L side cover	1	pcs	
6	T-00-006	油箱护板下装饰件左	L decor, gas tank lower protect	1	pcs	

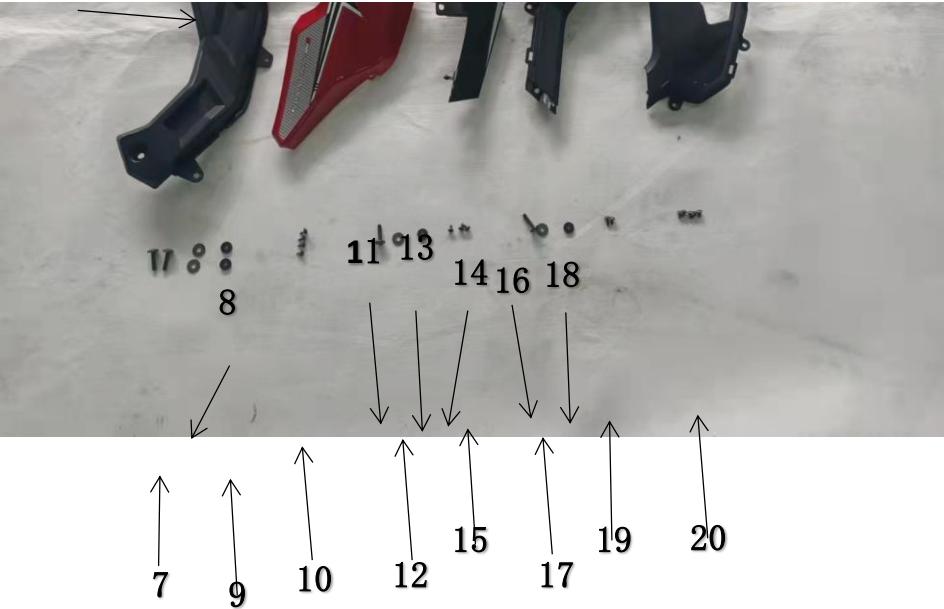


7	T-00-007	装饰件左螺栓大扁头M6×20	Flat bolt M6x20, L decor	2	pcs	
8	T-00-008	装饰件左平垫96φ 6	Flat washer 96φ6, L decor	2	pcs	
9	T-00-009	装饰件左胶平垫φ 6×φ 18×2	Flat washer φ6×φ18×2, L decor	2	pcs	
10	T-00-010	护板装饰件左自攻钉4.2×10	Screw 4.2x10, protect L decor	4	pcs	
11	T-00-011	车体左螺栓大扁头M6×16	Flate bolt, M6x16, L body	1	pcs	
12	T-00-012	车体左平垫96φ 6	Flat washer 96φ6, L body	1	pcs	
13	T-00-013	车体左胶平垫φ 6×φ 18×2	Flat washer φ6×φ18×2, L body	1	pcs	
14	T-00-014	车体左自攻钉4. 2×10	Screw 4.2x10, L body	1	pcs	
15	T-00-015	侧盖左自攻钉4. 2×10	Screw 4.2x10, L side cover	2	pcs	
16	T-00-016	侧盖左大扁头M6×16	Flat head bolt M6 x16, L side cover	1	pcs	
17	T-00-017	侧盖左平垫96φ 6	Flat washer 96φ6, L side cover	1	pcs	
18	T-00-018	侧盖左胶平垫φ 6×φ 18×2	Rubber flat washer φ6×φ18×2, L side cover	1	pcs	
19	T-00-019	侧盖左后+字带垫M5×16	Cross head M5x16, rear L side cover	2	pcs	
20	T-00-020	油箱护板下装饰件左自攻钉4. 2×10	Screw 4.2x10, L decor, gas tank protect	5	pcs	

--	--	--	--	--	--	--

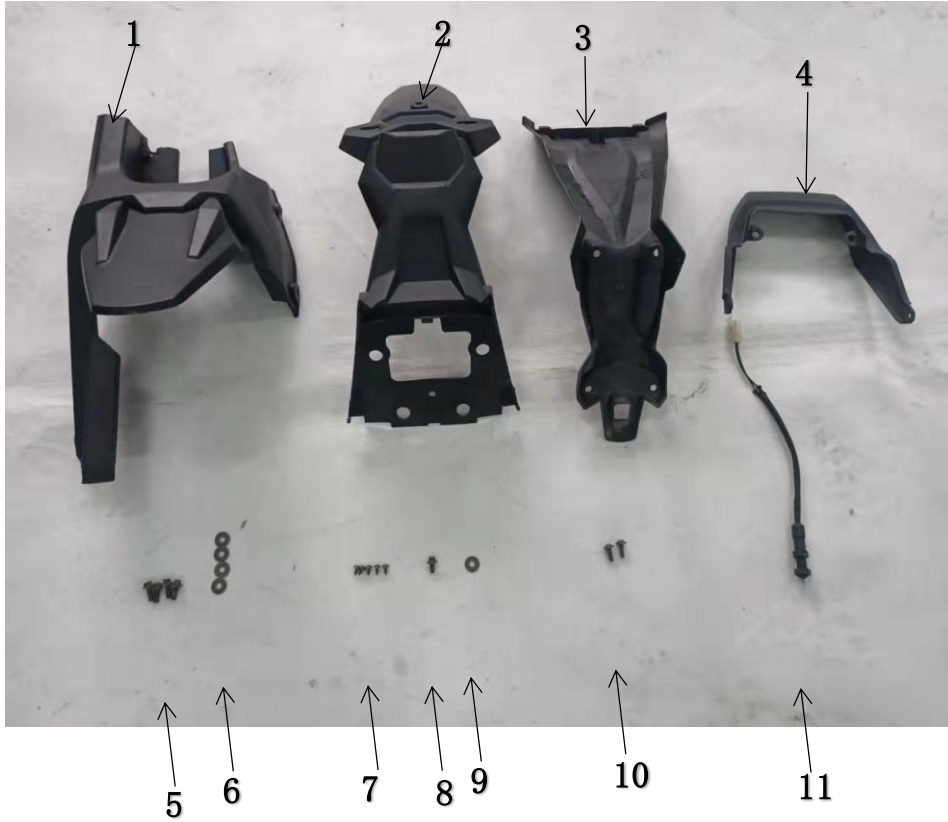

Inner Black Pieces,Plastic Body						
No	Code	Chinese	English	Qty	Unit	Remark
1	G-00-001	链盒	Chain guard	1	pcs	
2	G-00-002	后挡泥	Rear fender	1	pcs	
3	G-00-003	后挡泥盖板	Cover, rear fender	1	pcs	
4	G-00-004	尾盖	Tail cover	1	pcs	
5	G-00-005	链盒螺栓M6×16	Bolt M6x16, Chain cover	4	pcs	
6	G-00-006	链盒平垫96φ 6	Flat washer96φ6, chain guard	4	pcs	
7	G-00-007	后挡泥螺栓自攻钉4. 2×13	Screw 4.2x13, rear fender bolt	5	pcs	
8	G-00-008	后挡泥与支架螺栓M6×16	Bolt M6x16, Rear fender and bracket	1	pcs	
9	G-00-009	后挡泥与支架垫片96φ 6	Washer 96φ6, rear fender and bracket	1	pcs	
10	G-00-010	尾盖螺栓+字带垫5×16	Crosshead bolt 5x16, tail cover	2	pcs	
11	G-00-011	后制动开关线	Brake switch cable	1	pcs	

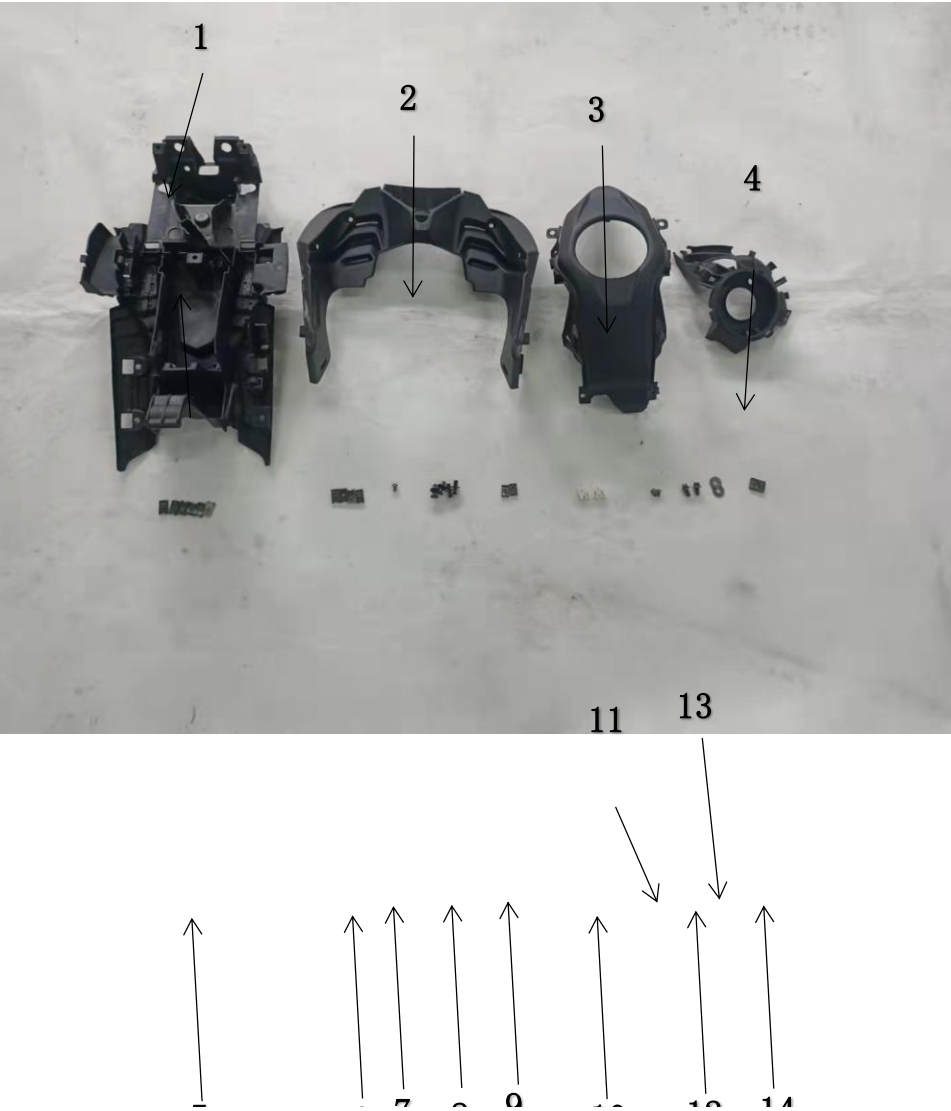

Inner Black Pieces,Plastic Body						
No	Code	Chinese	English	Qty	Unit	Remark
1	K-00-001	后挡泥前段	Front part, rear fender	1	pcs	
2	K-00-002	油箱前挡板	Front cover, gas tank	1	pcs	
3	K-00-003	油箱上护板	Upper protect cover, gas tank	1	pcs	
4	K-00-004	油箱上护板内衬	Inner panel, upper protect cover, gas tank	1	pcs	
5	K-00-005	后挡泥前段螺纹夹M5×17	Clamp M5x17, front part, rear fender	5	pcs	
6	K-00-006	油箱前挡板螺纹夹M5×17	Clamp M5x17, front cover of gas tank	4	pcs	
7	K-00-007	油箱前挡板自攻钉4.2×13	Screw 4.2 x13, front cover, gas tank	1	pcs	
8	K-00-008	油箱前挡板膨胀螺钉	Expansion screw, front cover, gas tank	4	set	
9	K-00-009	油箱上护板螺纹夹M5×17	Clamp M5x17, upper protect cover, gas tank	2	pcs	
10	K-00-010	油箱上护板装饰卡子	Clip, upper protect cover, gas tank	4	pcs	
11	K-00-011	油箱上护板自攻钉4.2×13	Screw 4.2 x13, upper protect cover, gas tank	2	pcs	
12	K-00-012	油箱上护板螺栓M6×16	Bolt M6x16, upper protect cover, gas tank	2	pcs	
13	K-00-013	油箱上护板平垫96φ6	Flat washer 96φ6, upper protect cover, gas tank	2	pcs	
14	K-00-014	油箱上护板内衬自攻卡子	Clip, inner panel of upper protect cover, gas tank	2	pcs	

5

6

7

8

9

10

12

14

